SK698

LEARN INSTRUCTIONS.

Thank you for choosing Ideal Security's WIRELESS ALERT BUNDLE.

If you have any questions, problems or comments regarding the installation or operation of this system, please do not hesitate to contact IDEAL's customer service department via our web site www.idealalert.ca, email info@idealalert.ca, or by calling toll free 800-361-2236 x 230. Regular business hours are 7:30am to 3:00pm, Eastern Time, Monday to Friday.

Occasionally instructions have errors or omissions, please check for updates to these instructions, security tips and other valuable information at www.idealalert.ca

The ALERT has six different sounds, each associated with a different a sensor or contact. The 2 motion sensors in this bundle will take up 2 of the sounds, once linked. The 2 remotes will also take 2 for panic button functions. The 2 remaining zones can be used for 2 other IDEAL SECURITY sensors or detectors such as SK621 or SK625 DOOR & WINDOW CONTACTS, or SK616 WATER DETECTOR or additional SK615 MOTION SENSORS. Please visit www.idealalert.ca for more information.

This unit is not a siren; it is an ALERT, to inform you of some type of incident, or warning. You can expand this set using the sensors linked to an Ideal SK626 SIREN as well.

WIRELESS ALERT BUNDLE SK698.

This package includes:
1 SK632 WIRELESS INTERIOR ALERT
1 SK629 REMOTE CONTROL (2 per pack)
2 SK615 WIRELESS MOTION DETECTORS
AC adapter, batteries and all connecting devices.

SPECIAL NOTE:
These items are **not** pre-linked to each other. As part of the set up, you must "LEARN" or link each wireless device to the interior alert.

Before learning the units or installing please read the instruction manual that comes with the Interior Alert (SK632) and familiarize yourself with the unit.

Once learning (linking) of all units is complete and before permanently installing any of the devices, please test the range of all units to make sure that the Alert receives triggers from all the sensors and remotes.

Each individual unit comes with its own set up and user manual. Open all the units, follow instructions on battery installation for all units. Once all batteries are installed you are now ready to learn all sensors to the ALERT.

HOW TO LEARN EACH UNIT TO THE ALERT

You must learn sensors to the ALERT before it can receive a signal following a trigger, incident or panic button, and at some time you may have to re-learn existing parts.
The Alert has a total of 6 zones for wireless sensors and remote controls.

Each sensor or remote must be learned separately.

With power on (in standby mode), press and release LEARN button (Fig 4) on the back of the Alert receiver, you will hear the first series of beeps as listed below. Press the learn button again for a single confirming beep. You are now ready to send a signal from a sensor. Trigger the sensor. If you hear a long beep then the learn code is successful. If you hear 4 short beeps, the learn was unsuccessful, please try (re-learn) again. Each additional sensor is learned the same way, up to 6. Listed below are the six different sounds in order. Each time you learn a sensor the next sound will be used until all six have been used.

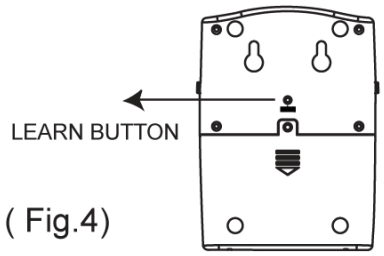

(Fig.4)

Note: series of beeps are:
1. Di-Di. **2.** Di-Di-Di. **3.** Ding-Dong. **4.** Di Du. **5.** WuWu. **6.** DiDiDiDuDuDu

MODEL SK615 Wireless Motion Detector Sensor

1. Decide which zone (SOUND) on the ALERT you wish to learn the motion detector to. Then follow instructions below to trigger motion detector
    a. Trigger the motion detector by passing your hand in front of it, the LED light on the front of the motion detector will flash.
    b. You will hear a long beep from the Alert to confirm that learn was successful. If you hear 4 short beeps, then it was unsuccessful, you must start again.

    NOTE: One you have learned the motion detector to your Alert, place a towel over the motion detector before learning other items as the motion detector will send signal to the Alert every time you move.

MODEL SK629 WIRELESS REMOTE CONTROL

1. Decide which zone (SOUND) on the ALERT you wish to learn the first remote control to. Then follow instructions below to trigger motion detector
    a. Trigger the first remote control by pressing any button, the LED light on the front of the remote will flash.
    b. You will hear a long beep from the Alert to confirm that the learn was successful. If you hear 4 short beeps, then it was unsuccessful, you must start again.

Once the first remote has been learned, repeat above steps for the second remote.

The remote controls can be used to silence, turn on and turn off the alert. Once the alert is triggered by a sensor like the motion detector you can use your remote control to silence of the alert. (stop it from beeping). If this is done you must remember to **rearm** the alert again with the remote control, otherwise it will not receive a signal if a sensor is triggered.

TO LEARN ADDITIONAL WIRELESS SENSORS OR REMOTE CONTROLS CODES TO THE ALERT.

You may learn 2 additional sensors to your Alert. You can learn a total of 6 sensors to this unit.

Each sensor or remote must be learned to the Alert. Follow the following steps.

With power on (in standby mode), press and release LEARN button (Fig 4) on the back of the Alert receiver, you will hear the first series of beeps as listed below. Press the learn button again for a single confirming beep. You are now ready to send a signal from a sensor. Trigger the sensor. If you hear a long beep then the learn code is successful. If you hear 4 short beeps it was unsuccessful, please try (re-learn) again. Each additional sensor is learned the same way, up to 6. Listed below are the six different sounds in order. Each time you learn a sensor the next sound will be used until all six have been used.

Note: series of beeps are: 1. Di-Di. **2.** Di-Di-Di. **3.** Ding-Dong. **4.** Di Du. **5.** WuWu. **6.** DiDiDiDuDuDu

a. Trigger the sensor or remote control that you are trying to learn as follows:
   - **Wireless motion detector SK615**, by moving hand in front of sensor to send signal.**** please see note below***
   - **Wireless door/window sensor SK621 & SK625**, opening and closing the magnetic switch will send signal.
   - **Wireless water alarm sensor SK616**, put sensor in water to trigger and send signal.
   - **Wireless temperature sensor SK627**, by pressing the test button.
   - **Remote control SK629**, pressing any key will trigger and send a signal.

b. You will hear a long beep from the Alert to confirm that learn was successful. If you hear 4 short beeps instead, then it was unsuccessful, please try (re-learn) again.

NOTE: if you have learned a motion detector to your auto dialer, place a towel over the motion sensor before learning other items as the motion sensor will send signal to auto-dialer every time you move.

Thank you for your purchase: If you have any questions about setup or function of this product, please call us at 800-361-2236 x230(514-363-1030) before returning to the point of purchase. Perhaps we can resolve your difficulty and eliminate future customer dissatisfaction.

e-mail: info@idealalert.ca www.idealalert.ca